


# The Ultimate Garage Door Seal!


## **General Installation Instructions**

Always start at the top of the door.

To install, fold the SnirtStopper seal in half, placing the part with the foam against the door and the non-foamed side against the door casing. Place a screw every 9 inches. There is no need to remove existing weatherstripping if it is intact and smooth against the building. Using the seam in the center of the seal as a guide, push the seam into the corner to help align the seal straight and tight to the door. See Page 2 for detailed installation instructions.

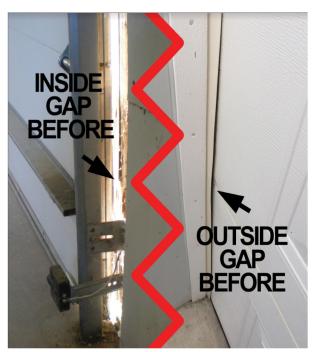



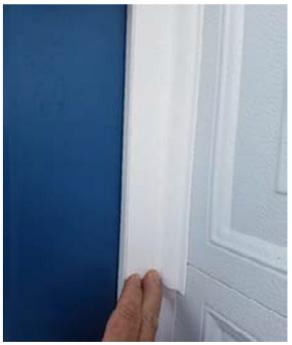

After: SnirtStopper installed over old seal



## **Detailed Installation Instructions**

Snirt SideSealer/TopSealer has two halves. The half with the white foam thermal insulator is installed against the garage door. The half without the foam is fastened to the garage door casing/frame. Note: There is no need to remove the existing weatherstripping as long as it is intact and smooth against the building.

### Prepping the Snirt SideSealer/TopSealer for installation

Begin by laying the seal in a warm place such as in the sun for at least 1 hour to loosenf the material and help release bends and folds acquired from the packaging process. As the material warms up, smooth out any folds by vigorously working the sealer back and forth through your hands and lightly tugging at the material.

Lay the SideSealer/TopSealer strip on a flat, clean surface, making sure the side facing up is the same side that will be facing away from the door when installed. The half with the foam thermal insulator will rest against the garage door. Put a mark about an inch from the end of the seal on the half without the foam. This will mark where the first screw will be placed. Since you want to start at the top, be sure to place this mark so you can install it as the top screw on the SideSealers. Starting at this mark, continue placing marks every 9 inches.

## Installing the Snirt SideSealer/TopSealer

**TopSealer** Start by installing the TopSealer first. Use the seam in the center of the seal as a guide, pushing the seam into the corner to help align the seal as you install it. Every door is different. Adjust the seal so more or less is pressed against the door as needed. Hold the TopSealer so it is tight against the side of the garage door casing/frame while you place the first screw. The first screw should be where you made the first mark on the seal. Pull the Snirt strip tight (as tight as a violin string) as you install each of the following screws every 9 inches to create a good seal. Before installing the last screw, trim the seal so that it is tight against the side of the garage door casing/frame. A second person may be needed to help pull the seal tight.

**SideSealer** After installing the TopSealer, install the two SideSealers. Again, use the seam in the center of the seal as a guide, pushing the seam into the corner to help align the seal. Every door is different. Adjust the seal so more or less is pressed against the door as needed. Hold the SideSealer so it is tight against the top of the garage door casing/frame and overlap the TopSealer slightly as you install the first screw. The first screw should be where you made the first mark on the seal. Pull the Snirt strip tight (as tight as a violin string) as you install each of the following screws every 9 inches to create a good seal. Before installing the last screw, trim the seal so that it is flush with the garage floor but still able to move freely. Repeat this for the other SideSealer. A second person may be needed to help pull the seal tight.

#### **Online Installation Video**

Scan this code with your smartphone or browse to the following link to view our installation video:

https://youtu.be/baRh-YE7SqE

